



เตาไมโครเวฟ

คำแนะนำสำหรับผู้ใช้และคู่มือการอบอาหาร

โปรดทราบว่า การรับประกันของ Samsung ไม่ครอบคลุมถึงการให้บริการเพื่ออธิบายถึงการใช้งานผลิตภัณฑ์
แก้ไขการติดตั้งที่ไม่ถูกต้อง หรือการทำความสะอาดหรือบำรุงรักษาตามปกติ

Planet First 100 %
Recycled Paper

คู่มือนี้ใช้กระดาษรีไซเคิล 100 %

MS23F301E**

MS23F302E**

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung
ในการรับบริการที่ครบครันยิ่งขึ้น โปรดลงทะเบียนผลิตภัณฑ์ได้ที่

www.samsung.com/register

SAMSUNG

สารบัญ

คุณสมบัติเตาอบ.....	11
เตาอบ.....	11
แผงควบคุม.....	12
อุปกรณ์เสริม.....	12
การใช้เตาอบ.....	13
การตั้งเวลา.....	13
การอบ/อุ่นอาหาร.....	13
ระดับพลังงาน.....	13
การปรับเวลาอบอาหาร.....	14
การหยุดการอบอาหาร.....	14
การใช้คุณสมบัติละลายน้ำแข็งอัตโนมัติ.....	14
คู่มือการปรุงอาหารด้วยไอน้ำ (เฉพาะรุ่น MS23F301EF*, MS23F302EF*).....	14
คู่มือสำหรับอุปกรณ์การทำอาหาร.....	16
การแก้ไขปัญหาและรหัสข้อผิดพลาด.....	17
การแก้ไขปัญหา.....	17
ข้อมูลจำเพาะด้านเทคนิค.....	18

ข้อมูลเกี่ยวกับความปลอดภัย

การใช้คู่มือฉบับนี้

ขอขอบคุณที่เลือกใช้เตาไมโครเวฟ SAMSUNG คำแนะนำสำหรับผู้ใช้นี้ประกอบด้วยข้อมูลที่เป็นประโยชน์มากมายเกี่ยวกับการอบอาหารด้วยเตาไมโครเวฟของคุณ ดังนี้

- ข้อควรระวังเพื่อความปลอดภัย
- อุปกรณ์เสริมและภาชนะที่เหมาะสม
- เคล็ดลับในการอบอาหารที่มีประโยชน์
- เคล็ดลับในการอบอาหาร

คำอธิบายสัญลักษณ์และไอคอน



คำเตือน

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บสาหัสหรือเสียชีวิต



ข้อควรระวัง

อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด การบาดเจ็บเล็กน้อยหรือทำให้ สิ่งของเสียหาย



คำเตือน อันตรายจากไฟ



คำเตือน พื้นผิวร้อน



คำเตือน ไฟฟ้า



คำเตือน วัตถุที่ระเบิดได้



ห้ามทำ



ห้ามสัมผัส



ห้ามถอดประกอบ



ทำตามคำแนะนำอย่างเคร่งครัด



ถอดปลั๊กของเครื่องชั๊กจากเต้าเสียบ ที่ผนัง



ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกัน ไฟฟ้าดูด



ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ



หมายเหตุ



ข้อมูลสำคัญ

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต
โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยตลอดเวลา
ก่อนที่จะใช้เตาอบ โปรดปฏิบัติตามคำแนะนำต่อไปนี้

⚠ คำเตือน (การทำงานของไมโครเวฟเท่านั้น)







- ☐ คำเตือน: ห้ามใช้เตาอบหากประตูหรือซีลขอบประตูเสียหาย
จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ
- ☐ คำเตือน: อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่มี
ความชำนาญเป็นผู้ซ่อมบำรุงซึ่งต้องมีการถอดฝาครอบของ
เครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ
- ☐ คำเตือน: โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิด
สนิท เนื่องจากอาจจะระเบิดได้
- ☐ อุปกรณ์นี้ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น
- ★ คำเตือน: ไม่ควรให้เด็กใช้เตาอบตามลำพัง ยกเว้นกรณีที่เด็ก
ได้รับคำแนะนำเพียงพอที่จะใช้เตาอบอย่างปลอดภัย และทราบ
ถึงอันตรายจากการใช้ผิดวิธี







- ★ คำเตือน: อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไป
และบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิต
ไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแล
หรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้าม
เด็กเล่นกับอุปกรณ์นี้ ห้ามมิให้เด็กเป็นผู้ทำความสะอาดและบำรุง
รักษา ยกเว้นเด็กที่มีอายุ 8 ปีขึ้นไปและมีการดูแลโดยผู้ใหญ่
- ★ โปรดใช้เฉพาะภาชนะที่เหมาะสมกับเตาไมโครเวฟเท่านั้น
- ★ เมื่ออุ่นอาหารในภาชนะพลาสติก โปรดระวังว่าอาจจะมีการติดไฟ
ขึ้นในเตาอบ
- ★ เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหารและเครื่อง
ดื่ม การทำให้อาหารหรือผ้าแห้ง และการให้ความร้อนกับแผ่นให้
ความร้อน รองเท้าสวมในบ้าน ฟองน้ำ ผ้าห่ม และวัสดุอื่นใน
ลักษณะเดียวกันอาจเกิดความเสียหายต่อการบาดเจ็บ ติดไฟ หรือ
เพลิงไหม้
- ☐ ถ้าพบว่ามีควัน ให้ปิดหรือถอดปลั๊กอุปกรณ์ และอย่าเปิดประตู
เตาอบ เพื่อมิให้เกิดเปลวไฟ
- ★ คำเตือน: ระหว่างการอุ่นร้อนเครื่องดื่มด้วยไมโครเวฟ จะมีการ
เดือดที่ล้นซ้อออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือ
ภาชนะ

- ★ คำเตือน: ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก
- ☐ ห้ามอุ่นร้อนหรือให้ความร้อนกับไขทั้งเปลือกหรือไขต้มในเตาไมโครเวฟ เนื่องจากอาจจะระเบิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม
- ★ ทำความสะอาดและจัดอาหารตกค้างอย่างสม่ำเสมอ
- ☐ หากไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้
- ☐ อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาร์วาน และยานพาหนะในลักษณะเดียวกัน
- ★ อุปกรณ์นี้ไม่เหมาะสำหรับบุคคลที่มีสภาพร่างกาย ประสาทสัมผัสหรือจิตที่ไม่ปกติ รวมถึงเด็กหรือบุคคลที่ขาดประสบการณ์ความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล โปรดระวังมิให้เด็กเล่นกับอุปกรณ์นี้
- ★ โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

- ☑ กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิตตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย
- ☐ คำเตือน: โปรดอย่าอุ่นของเหลวหรืออาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจจะระเบิดได้
- ☐ อุปกรณ์นี้ไม่สามารถทำความสะอาดด้วยเครื่องฉีดน้ำ
- ★ เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย
- ★ ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้
- ★ ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน
- ★ เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้ง่าย
- ☐ เตาไมโครเวฟนี้ออกแบบมาสำหรับใช้งานบนเคาน์เตอร์เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้ในช่องของตู้

⚠ คำเตือน (การทำงานของเตาอบเท่านั้น) - อุปกรณ์เสริม

 
-  คำเตือน: เมื่อใช้งานอุปกรณ์นี้ในโหมดผสม ไม่ควรให้เด็กใช้งานอุปกรณ์โดยไม่มีผู้ใหญ่ดูแล เนื่องจากจะมีอุณหภูมิสูง
-  ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อนภายในเตาอบ
-  คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน ควรดูแลให้พื้นมือเด็ก
-  ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำ
-  คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต
-  คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน โปรดใช้ความระมัดระวังอย่าสัมผัสขดลวดความร้อนภายในเตาอบ ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด

-  อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มี การดูแล
-  ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือที่กัดโลหะเพื่อทำความสะอาดประตูเตาอบ เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้
-  อุณหภูมิของพื้นผิวที่สัมผัสได้อาจสูงมากเมื่ออุปกรณ์นี้ทำงาน
-  ประตูหรือพื้นผิวภายนอกอาจร้อนจัดเมื่ออุปกรณ์ทำงาน
-  ดูแลให้อุปกรณ์และสายไฟพื้นมือเด็กที่อายุต่ำกว่า 8 ปี
-  อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบบริโมทคอนโทรลแยกต่างหาก

การติดตั้งเตาไมโครเวฟ

วางเตาไว้บนพื้นผิวที่เรียบและได้ระดับ 85 ซม. เหนือพื้น มีความแข็งแรงเพียงพอที่จะรับน้ำหนักของเตาได้อย่างปลอดภัย

1. เมื่อคุณติดตั้งเตาอบ โปรดจัดวางให้มีการระบายอากาศที่เพียงพอ โดยเว้นช่องว่างอย่างน้อย 10 ซม. (4 นิ้ว) ที่ด้านหลังและด้านข้างของเตาอบ และเว้นที่ 20 ซม. (8 นิ้ว) ด้านบนของเตาอบ

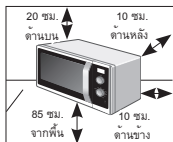

2. นำวัสดุบรรจุภัณฑ์ออกจากภายในเตาอบ
3. ติดตั้งวงแหวนและจานหมุน ทดลองว่าจานสามารถหมุนได้อย่างอิสระ (รุ่นที่มีจานหมุนเท่านั้น)
4. เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้อย่าง

- ❑ กรณีที่ปลั๊กไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย
- เพื่อความปลอดภัยของคุณ โปรดเสียบปลั๊กสายไฟเข้ากับเต้ารับไฟฟ้ากระแสสลับที่มีการลงกราวด์อย่างถูกต้อง

- ❑ ห้ามติดตั้งเตาไมโครเวฟในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาอบธรรมดาหรือเครื่องทำความร้อน โปรดปฏิบัติตามข้อกำหนดการจ่ายไฟของเตาอบ และหากจะใช้สายต่อ จะต้องใช้สายที่เป็นมาตรฐานเดียวกับสายไฟของเตาอบ เช็ดด้านในของซีลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาไมโครเวฟเป็นครั้งแรก

การทำความสะอาดเตาอบไมโครเวฟของคุณ

โปรดทำความสะอาดส่วนต่อไปนี้ในเตาไมโครเวฟเป็นประจำ เพื่อไม่ให้มีไขมันและเศษอาหารเกาะ:

- ผิวหน้าด้านในและด้านนอก
- ประตูและซีลขอบประตู
- จานหมุนและวงแหวน (รุ่นที่มีจานหมุนเท่านั้น)

☐ ทุกครั้งต้องตรวจสอบว่าซีลประตูสะอาดและประตูสามารถปิดได้อย่างเหมาะสม

☐ การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอย่างมาก และอาจก่อให้เกิดอันตรายได้

 
1. ทำความสะอาดพื้นผิวด้านนอกด้วยผ้านุ่ม ชุบน้ำอุ่นผสมน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
2. ขจัดคราบอาหารที่กระเด็นบนพื้นผิวด้านในของเตาอบด้วยผ้าชุบน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
3. เพื่อให้เศษอาหารที่แห้งแข็งหลุดออกง่ายขึ้น และขจัดกลิ่นไม่พึงประสงค์ ให้วางถ้วยน้ำมะนาวผสมน้ำในเตาอบ และให้ความร้อนโดยใช้พลังงานเต็มที่เป็นเวลาสิบนาที
4. ล้างจานที่ใช้เครื่องล้างได้เมื่อใดก็ตามที่ต้องการ

☑ โปรดอย่าทำน้ำหกในช่องระบาย ห้ามใช้สารขัดถูหรือสารทำลายทางเคมีเด็ดขาด โปรดใช้ความระมัดระวังขณะทำความสะอาดซีลขอบประตู เพื่อให้แน่ใจว่าไม่มีเศษอาหารติดอยู่

- สะสม
- ทำให้ประตูปิดไม่สนิท

☑ ทำความสะอาดภายในเตาอบหลังจากใช้งานทันที โดยใช้ผ้ายาล้างอ่อนๆ แต่โปรดรอให้เตาไมโครเวฟเย็นลงก่อนที่จะทำความสะอาด เพื่อป้องกันอันตรายที่อาจเกิดขึ้น

เมื่อทำความสะอาดส่วนบนที่อยู่ด้านในช่องเตาอบ ให้หมุนตัวทำความร้อนลง 45° แล้วทำความสะอาด (รุ่นที่ขจัดลวดความร้อนหมุนได้เท่านั้น)




การเก็บรักษาและซ่อมเตาไมโครเวฟ

โปรดทราบข้อควรระวังต่อไปนี้ เมื่อเก็บรักษาหรือนำเตาไมโครเวฟไปซ่อมแซม


ห้ามใช้เตาอบ หากประตูหรือซีลขอบประตูเสียหาย

- บานพับเสียหาย
- ซีลมีความเสียหาย
- โครงภายนอกของเตาอบบิดหรืองอ

โปรดใช้บริการซ่อมบำรุงโดยช่างผู้ชำนาญการซ่อมไมโครเวฟเท่านั้น

 ห้ามถอดโครงภายนอกของเตาอบ หากเตาไมโครเวฟทำงานไม่ถูกต้อง หรือต้องมีการบำรุงรักษา หรือหากคุณมีข้อสงสัย

- ถอดสายไฟออกจากปลั๊กที่ผนัง
- ติดต่อศูนย์บริการหลังการขายที่อยู่ใกล้

 หากคุณต้องการเก็บเตาอบไว้ชั่วคราว โปรดเก็บไว้ในที่แห้งและไม่มีฝุ่นละออง

สาเหตุ: ฝุ่นละอองและความชื้นอาจมีผลเสียต่อส่วนประกอบของเตาอบ





 เตาไมโครเวฟนี้ไม่เหมาะสำหรับใช้งานเพื่อการพาณิชย์







 ห้ามเปลี่ยนหลอดไฟด้วยตนเอง เพื่อความปลอดภัย

โปรดติดต่อศูนย์บริการลูกค้าที่ได้รับอนุญาตของ Samsung ที่อยู่ใกล้ เพื่อบันทึกหมายเลขให้ช่างที่มีคุณสมบัติเป็นผู้เปลี่ยนหลอดไฟให้

⚠ คำเตือน					
	ควรให้เจ้าหน้าที่ผู้มีความชำนาญเท่านั้นเป็นผู้แก้ไขหรือซ่อมแซมอุปกรณ์	✓	✓	✓	✓
	ห้ามให้ความร้อนของเหลวหรืออาหารอื่นในภาชนะที่ปิดสนิทแน่นสำหรับฟังก์ชันไมโครเวฟ	✓	✓	✓	✓
	เพื่อความปลอดภัย ห้ามใช้เครื่องทำความสะอาดด้วยแรงดันน้ำหรือเครื่องทำความสะอาดด้วยเครื่องฉีดไอน้ำ	✓	✓	✓	✓
	ห้ามติดตั้งอุปกรณ์ใกล้เครื่องทำความร้อน วัตถุไวไฟ ความชื้น ตำแหน่งที่มีน้ำมันหรือฝุ่นละอองมาก ในตำแหน่งที่ได้รับแสงแดดโดยตรงหรือได้รับน้ำ หรือในที่ซึ่งอาจมีก๊าซรั่ว หรือบนพื้นที่ไม่เรียบ	✓	✓	✓	✓
	อุปกรณ์นี้ต้องมีการลงกราวอย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ	✓	✓	✓	✓
	นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากช่องข้อปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง	✓	✓	✓	✓
	ห้ามดึงหรือบิดงอหรือวางสิ่งของทับสายไฟ	✓	✓	✓	✓
	ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ	✓	✓	✓	✓
	ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก	✓	✓	✓	✓
	ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่	✓	✓	✓	✓
	ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามีสิ่งแปลกปลอมหรือน้ำเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการที่อยู่ใกล้ที่สุด	✓	✓	✓	✓
	ห้ามใช้แรงกดหรือกระแทกอุปกรณ์	✓	✓	✓	✓

<input type="checkbox"/>	อย่าวางอุปกรณ์ไว้บนวัตถุที่เปราะบางเช่นชิงค์หรือกระจก	✓	✓		
<input type="checkbox"/>	ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ เครื่องทำความสะอาดด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดอุปกรณ์	✓	✓	✓	✓
<input type="checkbox"/>	ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับข้อมูลจำเพาะของผลิตภัณฑ์	✓	✓		✓
<input type="checkbox"/>	ต่อสายไฟเข้ากับตัวรับไฟฟ้าที่ผนึกอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อ หรือหม้อแปลงไฟฟ้า	✓	✓	✓	
<input type="checkbox"/>	ห้ามเกี่ยวสายไฟกับวัตถุที่เป็นโลหะ ใส่สายไฟไว้ระหว่างวัตถุหรือหลังเตาอบ	✓	✓	✓	
<input type="checkbox"/>	ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือตัวรับไฟฟ้าที่เสียหาย หลวม เมื่อปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ	✓	✓	✓	✓
<input type="checkbox"/>	ห้ามฉีดพ่นน้ำมันเตาอบ	✓	✓		
<input type="checkbox"/>	ห้ามวางสิ่งของบนเตาอบ ภายในหรือบนประตูเตาอบ	✓	✓	✓	
<input type="checkbox"/>	ห้ามพ่นสารระเหยเช่นยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง	✓	✓		
<input type="checkbox"/>	โปรดอย่าเก็บวัสดุที่ติดไฟได้ไว้ในเตาอบ ใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องต้มที่มีแอลกอฮอล์ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสกับส่วนที่ร้อนจัดของเตาอบ	✓		✓	✓
★	ให้เด็กอยู่ห่างจากประตูที่เปิดหรือปิด เนื่องจากอาจชนกับประตูหรือทำให้ประตูหนีบนิ้วได้	✓	✓	✓	✓

★	คำเตือน: ระหว่างการอุ่นร้อนเครื่องต้มด้วยไมโครเวฟ จะมีการเดือดที่สาหัสออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ เพื่อป้องกันสถานการณ์นี้ โปรดพักอาหารอย่างน้อย 20 วินาที หลังจากปิดเตาอบ เพื่อให้อุณหภูมิกระจายตัวอย่างสม่ำเสมอทุกครั้ง คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้งหลังจากอุ่น ในกรณีที่ของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล: <ul style="list-style-type: none"> • เช็ดบริเวณที่ถูกลวกให้น้ำเย็นเป็นเวลาอย่างน้อย 10 นาที • พั่นด้วยผ้าพันแผลที่แห้งและสะอาด • โปรดอย่าทาครีม น้ำมัน หรือโลชั่น 	✓	✓	✓	✓
<div> <div>⚠ ข้อควรระวัง</div> <div>     </div> </div>					
★	โปรดใช้เฉพาะภาชนะที่เหมาะสมกับเตาไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะจานที่มีขอบทองหรือเงิน เหล็กเสียบ ส้อม ฯลฯ นำหลอดที่ใช้ปิดถุงออกจากถุงกระดาษหรือถุงพลาสติกก่อน สาเหตุ: อาจมีประกายไฟเกิดขึ้น ซึ่งทำให้เตาไมโครเวฟเสียหาย	✓		✓	✓
<input type="checkbox"/>	ห้ามใช้เตาไมโครเวฟเพื่อทำให้หนังสัตว์ไหมหรือผ้าแห้ง	✓		✓	✓
★	ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันอาหารร้อนเกินและไหม้	✓		✓	✓
<input type="checkbox"/>	ห้ามจุ่มสายไฟหรือปลั๊กในน้ำ และระวังอย่าให้สายไฟอยู่ใกล้พื้นผิวที่ร้อน	✓	✓		
<input type="checkbox"/>	ห้ามอุ่นร้อนหรือให้ความร้อนกับไขทั้งเปลือกหรือไขต้มในเตาไมโครเวฟ เนื่องจากอาจจะเปิดได้ แม้ว่าจะสิ้นสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม นอกจากนี้ อย่าให้ความร้อนขวด เขยือก หรือภาชนะที่ปิดฝาสนิทหรือเป็นสุญญากาศ ถั่วที่มีเปลือก มะเขือเทศ ฯลฯ			✓	✓
<input type="checkbox"/>	ห้ามปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ ผ้าหรือกระดาษอาจติดไฟ ขณะที่มีการระบายอากาศร้อนออกจากเตา เตาอบอาจมีความร้อนสูงเกินไป และเกิดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้นานกว่าจะเย็นลง	✓		✓	

	ทุกครั้ง จะต้องใช้ถุงมือกันความร้อนขณะนำอาหารออกจากเตาเพื่อป้องกันความร้อนลวก		✓	
	คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพักให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือดและกระเด็น		✓	
	ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรืออากาศร้อนลวก		✓	
	ห้ามใช้งานไมโครเวฟเมื่อไม่มีอาหารอยู่ในเตา เตาไมโครเวฟจะปิดลงโดยอัตโนมัติหลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ภายในเตาอบตลอดเวลา เพื่อดูดซับพลังงานไมโครเวฟในกรณีที่เตาไมโครเวฟทำงานโดยไม่ตั้งใจ	✓		✓
	ติดตั้งเตาอบตามระยะห่างที่กำหนดในคู่มือนี้ (ดูที่ การติดตั้งเตาไมโครเวฟ)	✓		✓
	ใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเต้าเสียบปลั๊กเตาอบ	✓	✓	✓

ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป (การทำงานของไมโครเวฟเท่านั้น)

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาอบขณะที่ประตูของเตาเปิดอยู่ หรือดัดแปลงแก้ไขล็อคเพื่อความปลอดภัย (สลักของประตู) หรือสอตัวล็อกในช่องล็อคเพื่อความปลอดภัย ไม่ว่าในกรณีใดๆ
- ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มืออาหารหรือสารทำความสะอาดค้างอยู่ที่ผิวหน้าของซิล ตรวจสอบว่าประตูและซิลของประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้าแห้งที่แห้งหลังจากการใช้งาน
- ห้ามใช้เตาอบที่มีความเสียหาย จนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต โปรดปิดประตูของเตาอบให้สนิท และตรวจสอบว่าส่วนต่างๆ ต่อไปนี้ไม่ชำรุดเสียหาย:
 - (1) ประตู (งอ)
 - (2) บานพับประตู (แตกหักหรือหลวม)
 - (3) ซิลประตูและผิวของซิล
- ห้ามปรับแต่งหรือซ่อมแซมเตาอบโดยบุคคลอื่นที่ไม่ใช่ผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต

 
Samsung จะเรียกเก็บค่าบริการซ่อมแซม สำหรับการเปลี่ยนอุปกรณ์เสริมหรือซ่อมจุดบกพร่องที่ไม่ใช่ส่วนสำคัญ ถ้าความเสียหายของอุปกรณ์ และ/หรือความเสียหายหรือการสูญเสียอุปกรณ์เสริมนั้นเกิดจากการกระทำของผู้ใช้ รายการที่ครอบคลุมได้แก่:

- รอยบุบ รอยขีดข่วน ประตู มือจับ แผงด้านนอก หรือแผงควบคุมแตกหัก
- ถาดแตกหรือสูญหาย ล้อเลื่อนนำทาง เพื่องวางแหวน หรือตะแกรงลวด

- ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำเท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานอุปกรณ์
- เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com
- เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหาร ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามอุ่นผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งอาจลุกไหม้ได้ ผู้ผลิตไม่รับส่วนรับผิดชอบความเสียหายที่เกิดจากการใช้อุปกรณ์อย่างไม่ถูกต้องหรือไม่เหมาะสม
- การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอบอย่างมาก และอาจก่อให้เกิดอันตรายได้


คุณสมบัติเตาอบ

เตาอบ

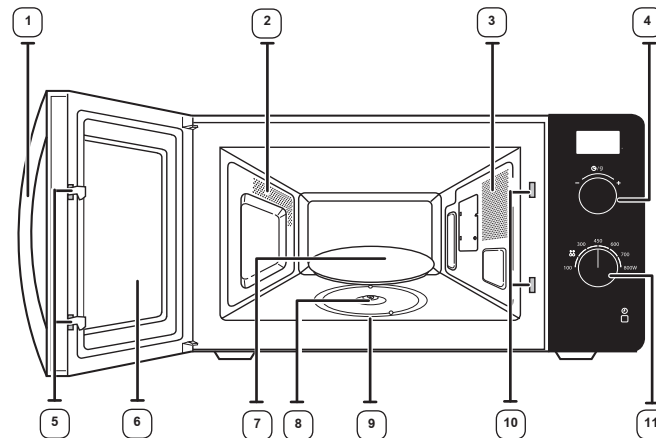

- | | |
|--------------------|-----------------------------------|
| 1. ที่จับประตู | 7. จานหมุน |
| 2. ช่องระบายอากาศ | 8. เฟืองของจานหมุน |
| 3. ไฟ | 9. วงแหวน |
| 4. ปุ่มเวลาน้ำหนัก | 10. ช่องล็อกเพื่อความปลอดภัย |
| 5. สลักประตู | 11. ปุ่มควบคุมกำลังไฟในการอบอาหาร |
| 6. ประตู | |

 แผงควบคุม

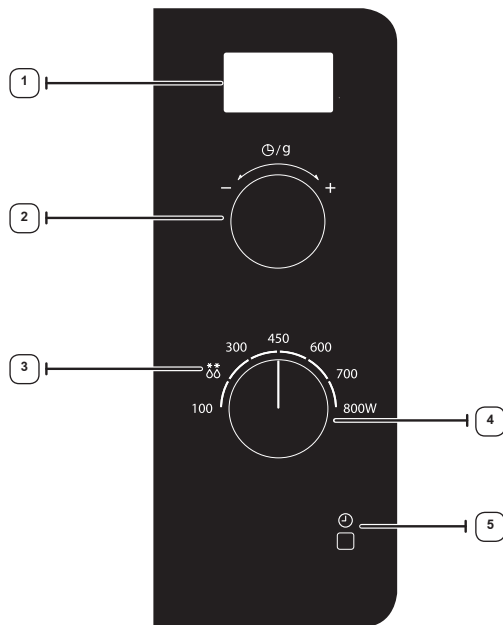


- | | |
|---------------------|----------------------------------|
| 1. จอแสดงผล | 4. ปุ่มควบคุมกำลังไฟในการอบอาหาร |
| 2. ปุ่มเวลา/น้ำหนัก | 5. ปุ่ม การตั้งนาฬิกา |
| 3. ละลายน้ำแข็ง | |

อุปกรณ์เสริม

คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ


1. วงแหวน เพื่อวางไว้บริเวณส่วนกลางของเตาอบ

 วัตถุประสงค์: วงแหวนนี้จะรองรับน้ำหนักของจานหมุน



2. จานหมุน วางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง

 วัตถุประสงค์: จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับอบอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย




- ห้ามใช้เตาไมโครเวฟหากไม่มีวงแหวนหรือจานหมุน

3. หม้อหนึ่ง โปรดดูที่หน้า 14 ถึง 16

(เฉพาะรุ่น MS23F301EF*, MS23F302EF*)

 วัตถุประสงค์: ใช้โถนึ่งพลาสติกเมื่อใช้ฟังก์ชันระบบนึ่งอาหาร



- ห้ามใช้เตาไมโครเวฟหากไม่มีวงแหวนหรือจานหมุน

การใช้เตาอบ

การตั้งเวลา

เตาไมโครเวฟของคุณมีนาฬิกาอยู่ภายใน เมื่อมีการจ่ายไฟ “0”, “88:88” หรือ “12:00” จะปรากฏบนหน้าจอแสดงผลโดยอัตโนมัติ

โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 24 หรือ 12 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ

 อย่าลืมปรับเวลา ถ้าคุณต้องสลับระหว่างเวลาของฤดูร้อนและฤดูหนาว

 ฟังก์ชันประหยัดพลังงานอัตโนมัติ

 
ถ้าคุณไม่เลือกฟังก์ชันใดเลยเมื่ออุปกรณ์อยู่ระหว่างการตั้งค่าหรือทำงานโดยมีสถานะหยุดชั่วคราว ฟังก์ชันจะถูกยกเลิก และนาฬิกาจะแสดงผลหลังจากผ่านไป 25 นาที ไฟของเตาอบจะดับลงหลังจากผ่านไป 5 นาทีโดยประตูเปิดอยู่

1. ถ้าต้องการแสดงเวลาในรูปแบบ...


เวลาแบบ 24 ชั่วโมง

เวลาแบบ 12 ชั่วโมง


กดปุ่ม (C) หนึ่งหรือสองครั้ง



 
2. หมุนปุ่ม เวลาหน้าหนัก (9/9) เพื่อกำหนดชั่วโมง



 
3. กดปุ่ม (C)



 4. หมุนปุ่ม เวลาหน้าหนัก (9/9) เพื่อกำหนดนาที



 5. กดปุ่ม (C)




การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้กล่าวถึงการอบและการอุ่นอาหาร

โปรดตรวจสอบการตั้งค่าการอบอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามลำพัง
ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน จากนั้น ปิดประตู

 1. กำหนดพลังงานให้อยู่ที่ระดับสูงสุด โดยบิดปุ่ม **ควบคุมกำลังไฟในการปรุงอาหาร** (พลังงานสูงสุด: 800 วัตต์)




2. กำหนดเวลาโดยหมุนปุ่ม **เวลาหน้าหนัก (9/9)**

ผลลัพธ์:

ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

 - 1) เตาอบจะเริ่มดำเนินการอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
- 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาทีละครั้ง)
- 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง




 ห้ามเปิดเครื่อง หากเตาอบว่างเปล่า

 คุณสามารถเปลี่ยนระดับพลังงานระหว่างการอบอาหาร โดยบิดปุ่ม **ควบคุมกำลังไฟในการอบอาหาร**

ระดับพลังงาน

คุณสามารถเลือกระดับพลังงานต่อไปนี้


ระดับพลังงาน	กำลังไฟฟ้า	ระดับพลังงาน	กำลังไฟฟ้า
สูง	800 วัตต์	ต่ำปานกลาง	300 วัตต์
อุ่นอาหาร	700 วัตต์	ละลายน้ำแข็ง (i)	180 วัตต์
สูงปานกลาง	600 วัตต์	ต่ำรักษาความร้อน	100 วัตต์
ปานกลาง	450 วัตต์		

 ถ้าคุณเลือกระดับพลังงานสูง จะต้องลดระยะเวลาในการอบอาหาร

 ถ้าคุณเลือกระดับพลังงานต่ำ จะต้องใช้ระยะเวลาในการอบอาหารมากขึ้น

การปรับเวลารอบอาหาร

 1. ปรับเวลารอบการปรุงอาหารที่เลือก โดยหมุนปุ่ม เวลา/น้ำหนัก (Ⓢ/g) หมุนปุ่มไปทางขวาเพื่อเพิ่มเวลารอบอาหารระหว่างการอบ




การหยุดการอบอาหาร


คุณสามารถหยุดอบอาหารเมื่อใดก็ได้ เพื่อตรวจสอบอาหาร

1. ในการหยุดชั่วคราว
ให้เปิดประตู

 ผลลัพธ์: การอบจะหยุดลง ในการอบอาหารต่อไป ให้ปิดประตู



 
2. ในการหยุดอย่างสมบูรณ์
หมุนปุ่ม ตั้งเวลา/น้ำหนัก (Ⓢ/g) ไปทางซ้าย
"เวลาปัจจุบัน" จะปรากฏ



การใช้คุณสมบัติละลายน้ำแข็งอัตโนมัติ

คุณสมบัติละลายน้ำแข็งอัตโนมัติจะช่วยให้คุณละลายเนื้อ เบ็ต ไก่ หรือปลาที่แช่แข็งไว้ ชื้นแรก ให้วางอาหารแช่แข็งไว้กึ่งกลางจานหมุน และปิดประตู

 
1. หมุนปุ่ม ความคมระดับพลังงาน ไปที่สัญลักษณ์ ละลายน้ำแข็ง (❄️)



2. หมุนปุ่ม เวลา/น้ำหนัก (Ⓢ/g) เพื่อเลือกน้ำหนักที่ต้องการ

ผลลัพธ์: ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน

 - 1) เตาอบจะเริ่มต้นการอบอาหาร เมื่อเสร็จแล้วก็จะส่งสัญญาณเตือน 4 ครั้ง
- 2) เตาอบจะส่งสัญญาณเตือน 3 ครั้ง (นาฬิกาจะดัง)
- 3) เวลาปัจจุบันจะปรากฏขึ้นอีกครั้ง



📌 ใช้กับผลิตภัณฑ์สำหรับไมโครเวฟเท่านั้น

การใช้คุณสมบัติละลายน้ำแข็ง

โปรดนำอาหารออกจากบรรจุภัณฑ์ก่อนที่จะละลายน้ำแข็ง วางอาหารแช่แข็งไว้บนจานหมุน กลับข้างอาหารเมื่อได้ยินเสียงจากเตาอบ ใช้เวลาพักอาหารให้เหมาะสม เมื่อการละลายน้ำแข็งเสร็จสิ้น

รหัส/อาหาร	ปริมาณอาหาร	เวลาพัก	คำแนะนำ
เนื้อ	200-1500 กรัม	20-60 นาที	หั่นหรือบดด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อเตาอบส่งเสียงเตือน
เบ็ต ไก่	200-1500 กรัม	20-60 นาที	
ปลา	200-1500 กรัม	20-50 นาที	

คู่มือการปรุงอาหารด้วยไอน้ำ (เฉพาะรุ่น MS23F301EF*, MS23F302EF*)

การปรุงด้วยวิธีไอน้ำ Power Steamer ใช้หลักการนำไอน้ำ ออกแบบมาสำหรับการปรุงอาหารได้รวดเร็ว ดีต่อสุขภาพในเตาไมโครเวฟ Samsung ของคุณ

 
อุปกรณ์เสริมนี้เหมาะสำหรับการหุงข้าว พาสต้า ผัก ฯลฯ ได้รวดเร็วและรักษาคุณค่าทางโภชนาการของอาหารไว้ ชุดไอน้ำไมโครเวฟประกอบด้วย 3 ส่วน:



ไถ



ถาดรอง



ฝาปิด

ชิ้นส่วนทั้งหมดสามารถทนความร้อนได้ตั้งแต่ -20 °C ถึง 140 °C
เหมาะสำหรับการเก็บในช่องแช่แข็ง และสามารถใส่แยกกันหรือใช้รวมกันได้

เงื่อนไขของการใช้งาน:

📌 ห้ามใช้:

- ปรุงอาหารที่มีน้ำตาลหรือไขมันมาก
- กับกรวยหรือการให้ความร้อนโดยการหมุนหรือบนเตา

📌 ล้างทุกส่วนให้สะอาดด้วยน้ำยาล้างจานก่อนที่จะใช้ครั้งแรก

📌 ในการดูเวลาในการปรุง โปรดดูคำแนะนำในตารางในหน้าถัดไป

การบำรุงรักษา:

- คุณสามารถล้างไดร์ในเครื่องล้างจาน
- เมื่อล้างด้วยมือ ให้ใช้น้ำร้อนและน้ำยาล้างจาน ห้ามใช้แผ่นใยขัด
- อาหารบางอย่าง (เช่น มะเขือเทศ) อาจทำให้พลาสติกเปลี่ยนแปลงไป ซึ่งเป็นเรื่องปกติและไม่ใช่อุปสรรคของการผลิต

การละลายน้ำแข็ง:

วางอาหารแช่แข็งที่ส่วนกลางของจานหมุน โดยไม่ปิดฝา ของเหลวจะอยู่ด้านล่างของไดร์ และจะไม่มีผลต่ออาหาร

การปรุง:

อาหาร	สัดส่วน	ระดับพลังงาน	เวลาปรุง (นาที)	เวลาพักอาหาร (นาที)	การประกอบ
หัวอาร์ทิโชค	300 ก. (1-2 ชิ้น)	800 วัตต์	5-6	1-2	ไดร์ที่มีถาดรอง+ ฝาปิด
	คำแนะนำ ล้างทำความสะอาดหัวอาร์ทิโชค ใส่ถาดรองในไดร์ จากนั้นนำไปวางบนถาด เติมน้ำมะนาวหนึ่งช้อนชา ปิดฝา				
ผักสด	300 ก.	800 วัตต์	4-5	1-2	ไดร์ที่มีถาดรอง+ ฝาปิด
	คำแนะนำ ซึ่งผักตามต้องการ (เช่น บร็อคโคลี่ ดอกกะหล่ำ แครอท พริกหวาน) ล้างทำความสะอาด และหั่นเป็นชิ้นเท่าๆ กัน ใส่ถาดรองในไดร์ วางให้เสมอกันบนถาด เติมน้ำสะอาด 2 ช้อนโต๊ะ ปิดฝา				
ผักแช่แข็ง	300 ก.	600 วัตต์	7-8	2-3	ไดร์ที่มีถาดรอง+ ฝาปิด
	คำแนะนำ วางผักแช่แข็งลงในไดร์ ใส่ถาดรองในไดร์ เติมน้ำสะอาด 1 ช้อนโต๊ะ ปิดฝา คนให้ทั่วทั้งการอบและพักอาหาร				
ข้าว	250 ก.	800 วัตต์	15-18	5-10	ไดร์ + ฝาปิด
	คำแนะนำ ใส่ข้าวในไดร์หนึ่ง เติมน้ำเย็น 500 มล. ปิดฝา หลังการอบ ให้พักอาหารเป็นเวลา 5 นาทีสำหรับข้าวขาว และ 10 นาทีสำหรับข้าวกล้อง				

อาหาร	สัดส่วน	ระดับพลังงาน	เวลาปรุง (นาที)	เวลาพักอาหาร (นาที)	การประกอบ
มันฝรั่งอบทั้งเปลือก	500 ก.	800 วัตต์	7-8	2-3	ไดร์ + ฝาปิด
	คำแนะนำ ซึ่งมันฝรั่งและล้างมันฝรั่งและวางในไดร์ เติมน้ำสะอาด 3 ช้อนโต๊ะ ปิดฝา				
สตูว์ (เย็น)	400 ก.	600 วัตต์	5-6	1-2	ไดร์ + ฝาปิด
	คำแนะนำ ใส่สตูว์ในไดร์หนึ่ง ปิดฝา คนให้ทั่วก่อนพักอาหาร				
ซूप (เย็น)	400 ก.	800 วัตต์	3-4	1-2	ไดร์ + ฝาปิด
	คำแนะนำ เทลงในไดร์หนึ่ง ปิดฝา คนให้ทั่วก่อนพักอาหาร				
ซूपแช่แข็ง	400 ก.	800 วัตต์	8-10	2-3	ไดร์ + ฝาปิด
	คำแนะนำ ใส่ซूपแช่แข็งในไดร์หนึ่ง ปิดฝา คนให้ทั่วก่อนพักอาหาร				
ขนมปังยีสต์ใส่แยมแช่แข็ง	150 ก.	600 วัตต์	1-2	2-3	ไดร์ + ฝาปิด
	คำแนะนำ พรมน้ำเย็นที่ด้านบนของอาหาร วางอาหารแช่แข็ง 1-2 ชิ้นเคียงข้างกันในไดร์หนึ่ง ปิดฝา				
ผลไม้แช่แข็ง	250 ก.	800 วัตต์	3-4	2-3	ไดร์ + ฝาปิด
	คำแนะนำ ซึ่งน้ำผลไม้แช่แข็ง (เช่น แอปเปิ้ล แพร์ พลัม แอปเปิ้ลอบ มะม่วง หรือสับปะรด) หลังจากปอกเปลือก ล้างและหั่นเป็นชิ้นเท่าๆ กัน ใส่ลงในไดร์หนึ่ง เติมน้ำ 1-2 ช้อนโต๊ะ และน้ำตาล 1-2 ช้อนชา ปิดฝา				

การใช้งานไถนี้



ไถ + ฝาปิด

ไถที่มีตาครอบ+ ฝาปิด

ข้อควรระวัง:

- ☒ ใช้ความระมัดระวังเมื่อเปิดฝาไถ เนื่องจากไอน้ำที่ออกมาอาจมีความร้อนจัด
- ☒ ใช้ถุงมือกันความร้อนเมื่อนำออกจากเตา

คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการอบอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ

คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตารางต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
ฟอยล์อะลูมิเนียม	✓ X	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้ฟอยล์มากเกินไป
จานสำหรับทำเกี๊ยว	✓	ห้ามอุ่นร้อนเกินกว่าแปดนาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหารจานด่วน		

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
<ul style="list-style-type: none"> ถ้วยโฟม ถุงกระดาษหรือหนังสือพิมพ์ กระดาษรีไซเคิลหรือขอบโลหะ 	<ul style="list-style-type: none"> ✓ X X 	<p>สามารถใช้อุ่นอาหาร ความร้อนสูงมากๆ จะทำให้โฟมละลาย</p> <p>อาจติดไฟ</p> <p>อาจเกิดประกายไฟ</p>
เครื่องแก้ว <ul style="list-style-type: none"> อุปกรณ์บนโต๊ะอาหารที่สามารถใช้กับเตาอบ เครื่องแก้วบาง โถแก้ว 	<ul style="list-style-type: none"> ✓ ✓ ✓ 	<p>ใช้ได้ หากไม่ประดับด้วยขอบโลหะ</p> <p>สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที</p> <p>ต้องใช้โดยไม่ปิดฝา เหมาะสำหรับภาชนะอุ่นอาหารเท่านั้น</p>
โลหะ <ul style="list-style-type: none"> จาน ลวดสำหรับมัดปากถุงแช่แข็ง 	<ul style="list-style-type: none"> X X 	<p>อาจเกิดประกายไฟหรือติดไฟ</p>
กระดาษ <ul style="list-style-type: none"> จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ กระดาษรีไซเคิล 	<ul style="list-style-type: none"> ✓ X 	<p>สำหรับการอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป</p> <p>อาจเกิดประกายไฟ</p>
พลาสติก <ul style="list-style-type: none"> ภาชนะ 	<ul style="list-style-type: none"> ✓ 	<p>โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน</p>

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
<ul style="list-style-type: none"> ฟิล์มสำหรับปิดอาหาร 	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
<ul style="list-style-type: none"> ถุงแช่แข็ง 	✓ X	เฉพาะชนิดที่ต้มได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ส้อมเจาะก่อน ถ้าจำเป็นต้องใส่
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกั้นอาหารกระเด็น

✓ : แนะนำ ✓X : ใช้อย่างระมัดระวัง X : ไม่ปลอดภัย

การแก้ไขปัญหาและรหัสข้อผิดพลาด

การแก้ไขปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหาก็ให้มา

ซึ่งเป็นอาการปกติ

- เกิดไอน้ำเกาะตัวในเตาอบ
- มีอากาศหมุนเวียนใกล้ประตูและด้านนอกของเตาอบ
- มีการสะท้อนแสงรอบๆ ประตูและกรอบด้านนอก
- มีไอน้ำออกมาจากข้างประตูหรือช่องระบายอากาศ

เตาอบไม่เริ่มทำงานเมื่อหมุนปุ่ม เวลาห้าห้ก (⏻/9)

- ประตูปิดเรียบร้อยหรือไม่

หลอดไฟไม่สว่าง

- ห้ามเปลี่ยนหลอดไฟด้วยตนเอง เพื่อความปลอดภัย โปรดติดต่อศูนย์บริการลูกค้าที่ได้รับอนุญาตของ Samsung ที่อยู่ใกล้ เพื่อบริการให้ช่างที่มีคุณสมบัติเป็นผู้เปลี่ยนหลอดไฟให้

อาหารไม่สุกเลย

- คุณกำหนดเวลาถูกต้อง และ/หรือกดปุ่ม เริ่มทำงาน (⏻/9) แล้วหรือไม่
- ประตูปิดเรียบร้อยหรือไม่
- คุณใช้วงจรไฟฟ้าเกินกำลัง และทำให้ฟิวส์ขาดหรือทำให้เบรกเกอร์ตัดไฟหรือไม่

อาหารสุกเกินไปหรือไม่สุกพอ

- คุณใช้เวลาในการอบอาหารเหมาะสมกับชนิดของอาหารหรือไม่
- ระดับพลังงานที่เลือกถูกต้องหรือไม่

เตาอบทำให้เกิดสัญญาณรบกวนวิทยุหรือโทรทัศน์

- คุณอาจพบสัญญาณรบกวนโทรทัศน์หรือวิทยุบ้างเล็กน้อย เมื่อเตาอบทำงาน ซึ่งเป็นอาการปกติ นี่เป็นอาการปกติในการแก้ไขปัญหานี้ โปรดติดต่อไมโครเวฟให้ห่างจากเครื่องรับโทรทัศน์ วิทยุ และเสาอากาศ
- ถ้าไมโครโปรเซสเซอร์ของเตาอบพบสัญญาณรบกวน อาจจะมีการเชื่อมต่อแสดงผล ในการแก้ปัญหาให้ถอดปลั๊กและต่อใหม่อีกครั้ง ตั้งเวลาใหม่

มีประกายไฟหรือเสียงแตกเกิดขึ้นภายในเตาอบ (เกิดประกายไฟ)

- คุณใช้จานที่มีขอบโลหะหรือไม่
- คุณลืมส้อมหรือเครื่องใช้ในครัวที่เป็นโลหะไว้ในเตาอบหรือไม่
- แผ่นฟอยล์อะลูมิเนียมใกล้กับผนังด้านในของเตาอบหรือไม่

☑ ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อศูนย์บริการลูกค้า SAMSUNG ใกล้บ้านคุณ โปรดเตรียมข้อมูลต่อไปนี้

- หมายเลขรุ่นและหมายเลขผลิตภัณฑ์ ซึ่งมักจะพิมพ์ไว้ที่ด้านหลังของเตาอบ
- รายละเอียดของการรับประกัน
- คำอธิบายปัญหาอย่างชัดเจน

จากนั้นติดต่อผู้แทนจำหน่าย หรือฝ่ายบริการหลังการขายของ SAMSUNG

ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลง โดยไม่ได้แจ้งให้ทราบ

รุ่น	MS23F301E**, MS23F302E**
การจ่ายไฟ	220 V ~ 50 Hz
การใช้พลังงาน ไมโครเวฟ	1150 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 800 วัตต์ (IEC-705)
ความถี่ของคลื่นขณะทำงาน	2450 เมกะเฮิรตซ์
แมกนีตรอน	OM75S(31)
วิธีระบายความร้อน	มอเตอร์พัดลมระบายความร้อน
ขนาด (กว้าง x สูง x ลึก) ด้านนอก ช่องของเตาอบ	489 x 275 x 374 มม. 330 x 211 x 324 มม.
ปริมาตร	23 ลิตร
น้ำหนักสุทธิ	12 กก. โดยประมาณ



ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) 021-5699-7777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com

 


MS23F301E**
MS23F302E**

Microwave Oven

Owner's Instructions & Cooking Guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.



This manual is made with 100 % recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

SAMSUNG

contents

Oven features.....	11
Oven.....	11
Control panel	12
Accessories	12
Oven use.....	13
Setting the time	13
Cooking/Reheating.....	13
Power levels	13
Adjusting the cooking time	14
Stopping the cooking.....	14
Using the auto defrost feature.....	14
Power steam cooking guide (Only MS23F301EF*, MS23F302EF* models).....	14
Cookware guide	16
Troubleshooting and error code	17
Troubleshooting	17
Technical specifications	18


safety information


USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:


- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

LEGEND FOR SYMBOLS AND ICONS

 **WARNING** Hazards or unsafe practices that may result in **severe personal injury or death.**

 **CAUTION** Hazards or unsafe practices that may result in **minor personal injury or property damage.**

 Warning; Fire hazard

 Warning; Hot surface

 Warning; Electricity


 Warning; Explosive material


 Do NOT attempt.


 Do NOT touch.

 Do NOT disassemble.

 Follow directions explicitly.

 Unplug the power plug from the wall socket.

 Make sure the machine is grounded to prevent electric shock.

 Call the service center for help.

 Note

 Important





IMPORTANT SAFETY INSTRUCTIONS





READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.

Before using the oven, confirm that the following instructions are followed.

WARNING (Microwave function only)

-  **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
-  **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
-  **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
-  This appliance is intended to be used in household only.

-  **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
-  **WARNING:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
-  Only use utensils that are suitable for use in microwave ovens.
-  When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignitions.

- ★ The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- ☞ If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- ★ **WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- ★ **WARNING:** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- ☐ Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- ★ The oven should be cleaned regularly and any food deposits removed.

- ☞ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- ☐ The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
- ★ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ★ Children should be supervised to ensure that they do not play with the appliance.
- ☞ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ☐ **WARNING:** Liquids or other foods must not be heated in sealed containers since they are liable to explode;
- ☐ The appliance should not be cleaned with a water jet.

- ★ This oven should be positioned proper direction and height permitting easy access to cavity and control area.
- ★ Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
- ★ If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
- ★ The microwave oven has to be positioned so that plug is accessible.
- ☐ The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING (Oven function only) - Optional

 
- ☐ **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- ★ During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

- ☐ **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- ☐ A steam cleaner is not to be used.
- ☐ **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- ★ **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- ★ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- ❑ Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- ❑ The temperature of accessible surfaces may be high when the appliance is operating.
- ❑ The door or the outer surface may get hot when the appliance is operating.
- ❑ Keep the appliance and its cord out of reach of children less than 8 years.
- ❑ Appliances are not intended to be operated by means of an external timer or separate remote-control system.

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

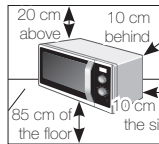1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.
2. Remove all packing materials inside the oven.
3. Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)
4. This microwave oven has to be positioned so that plug is accessible.
 - ❑ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
For your personal safety, plug the cable into a proper AC earthed socket.
 - ❑ Do not install the microwave oven in hot or

damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

 
- Inside and outside surfaces
 - Door and door seals
 - Turntable and Roller rings (Turntable type model only)
- ☑ **ALWAYS** ensure that the door seals are clean and the door closes properly.
- ☑ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth

and warm, soapy water. Rinse and dry.

2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
 3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
 4. Wash the dishwasher-safe plate whenever necessary.
- ☑ **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:
- Accumulate
 - Prevent the door from closing correctly
- ☑ **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it. (Swing heater model only)



STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair

❏ **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

❏ If you wish to store your oven away temporarily, choose a dry, dustfree place.



Reason : Dust and damp may adversely affect the working parts in the oven.

❏ This microwave oven is not intended for commercial use.

❏ The Light bulb should not be replaced in person for safety reasons.
Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.





⚠ WARNING		🔥	⚡	☠	👤
❏	Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
❏	Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
❏	For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
❏	Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
🔌	This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓
★	Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓
❏	Do not pull or excessively bend or place heavy objection the power cord.	✓	✓	✓	✓
★	In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
❏	Do not touch the power plug with wet hands.	✓	✓	✓	✓
❏	Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓









	Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
	Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
	Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
	Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
	Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
	Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
	Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
	Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
	Do not pour or directly spray water onto the oven.	✓	✓		
	Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
	Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓

	Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓
	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> Immerse the scalded area in cold water for at least 10 minutes. Cover with a clean, dry dressing. Do not apply any creams, oils or lotions. 	✓	✓	✓	✓

CAUTION



	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		

	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.		✓	✓
	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓	✓	
	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.		✓	
	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.		✓	
	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.		✓	
	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓		✓
	Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓	✓	
	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY. (MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- (a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- (b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- (c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
 - (1) door (bent)
 - (2) door hinges (broken or loose)
 - (3) door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

 
Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

- (a) A dented, scratched, or broken door, handle, out-panel, or control panel.
- (b) A broken or missing tray, guide roller, coupler, or wire rack.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.


oven features

OVEN

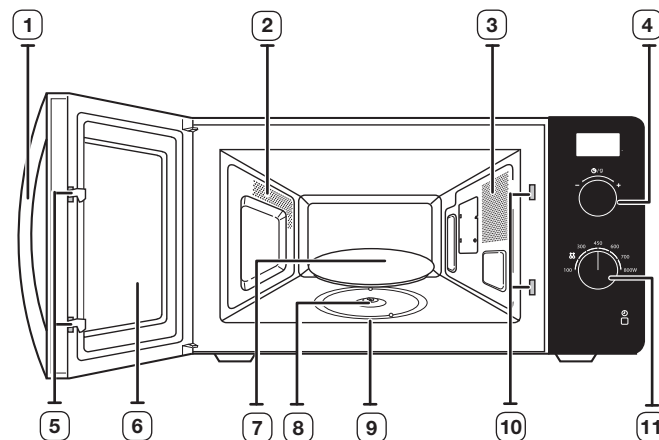

- | | |
|----------------------|---|
| 1. DOOR HANDLE | 7. TURNTABLE |
| 2. VENTILATION HOLES | 8. COUPLER |
| 3. LIGHT | 9. ROLLER RING |
| 4. TIME/WEIGHT DIAL | 10. SAFETY INTERLOCK HOLES |
| 5. DOOR LATCHES | 11. VARIABLE COOKING POWER CONTROL KNOB |
| 6. DOOR | |

 CONTROL PANEL

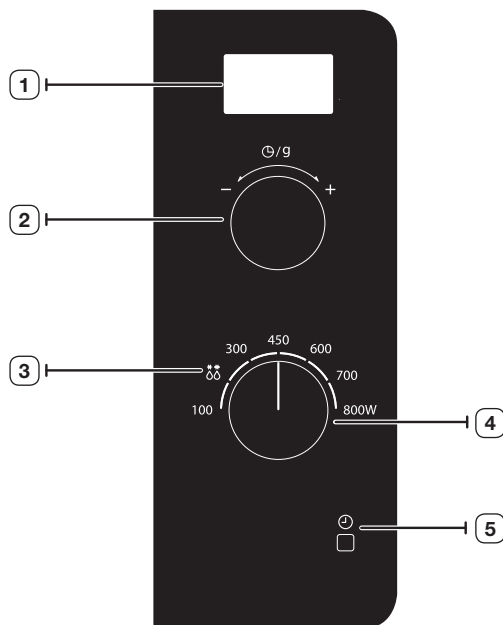


- | | |
|---------------------|--|
| 1. DISPLAY | 4. VARIABLE COOKING POWER CONTROL KNOB |
| 2. TIME/WEIGHT DIAL | 5. CLOCK SETTING BUTTON |
| 3. AUTO DEFROST | |

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.


- Roller ring**, to be placed in the centre of the oven.

 Purpose : The roller ring supports the turntable.



- Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

 
Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.



- DO NOT** operate the microwave oven without the roller ring and turntable.

- Steam cooker**, see page 14 to 16.
(Only MS23F301EF*, MS23F302EF* models)

 Purpose : The plastic steam cooker when using power steam function.



- DO NOT** operate the microwave oven without the roller ring and turntable.

oven use

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “:0”, “88:88” or “12:00” is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

 
- When you first install your microwave oven
- After a power failure
- ✎ Do not forget to reset the clock when you switch to and from summer and winter time.
- ✎ **Auto energy saving function**
If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.
Oven Lamp will be turned off after 5 minutes with door open condition.

1. To display the time in the...


24-hour notation

12-hour notation


Press the **Clock** (🕒) button once or twice.



 
2. Turn the **Time/Weight** (🕒/g) dial to set the hour.



 
3. Press the **Clock** (🕒) button.



 4. Turn the **Time/Weight** (🕒/g) dial to set the minute.



 
5. Press the **Clock** (🕒) button.




COOKING/REHEATING

The following procedure explains how to cook or reheat food. ALWAYS check your cooking settings before leaving the oven unattended. First, place the food in the centre of the turntable. Then, close the door.

 1. Select the power level to maximum by turning **COOKING POWER CONTROL** knob.
(MAXIMUM POWER : 800 W)



 2. Select the time by turning the **Time/Weight** (🕒/g) dial.



Result :

The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

✎ **Never** switch the microwave oven on when it is empty.

✎ You can change the power level during cooking by turning the **COOKING POWER CONTROL** knob.

POWER LEVELS

You can choose among the power levels below.


Power Level	Output	Power Level	Output
HIGH	800 W	MEDIUM LOW	300 W
REHEAT	700 W	AUTO DEFROST (🧊)	180 W
MEDIUM HIGH	600 W	LOW/KEEP WARM	100 W
MEDIUM	450 W		

✎ If you select higher power level, the cooking time must be decreased.

✎ If you select lower power level, the cooking time must be increased.

ADJUSTING THE COOKING TIME

 1. Adjust the remaining cooking time by rotating the **Time/Weight** (⌚/g) dial. Turn the dial right to increase the cooking time of your food during the cooking process.




STOPPING THE COOKING


You can stop cooking at any time to check the food.

1. To stop temporarily;
Open the door.

 Result : Cooking stops. To resume cooking, close the door.



 
2. To stop completely;
Turn the **Time/Weight** (⌚/g) dial to the left.
“Current time” will be displayed.




USING THE AUTO DEFROST FEATURE

The Auto Defrost feature enables you to defrost meat, poultry or fish. First, place the frozen food in the centre of the turntable and close the door.

 1. Turn the **COOKING POWER CONTROL** knob to the **Auto Defrost** (⏻) symbol.



 
2. Turn the **Timer/Weight** (⌚/g) dial select the appropriate weight.



Result : The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

 Use only recipients that are microwave-safe.

USING THE AUTO POWER DEFROST PROGRAMMES

Remove all kinds of packaging material before defrosting. Place the frozen foods on a turntable. Turn the food over when the oven beeps. Keep the corresponding standing time after Auto Defrosting has finished.

Code/Food	Serving size	Standing time	Recommendations
Meat	200-1500 g	20-60 min.	Shield the edges with aluminium foil. Turn the food over when the oven beeps.
Poultry	200-1500 g	20-60 min.	
Fish	200-1500 g	20-50 min.	

 
POWER STEAM COOKING GUIDE (ONLY MS23F301EF*, MS23F302EF* MODELS)

The Power Steamer is based on the principle of steam cooking, and is designed for fast, healthy cooking in your Samsung Microwave oven. This accessory is ideal for cooking rice, pasta, vegetables, etc. in record time, while preserving their nutritional values.

 
The Microwave Power steamer set is made up of 3 items:



Bowl






Insert tray






Lid

All parts withstand temperatures from -20 °C to 140 °C.
Suitable for freezer storage. Can also be used separately or together.

CONDITIONS of USE:

-  Do not use:
 - to cook foods with a high sugar or fat content,
 - with the grill or rotating heat function or on a hob.
-  Wash all parts well in soapy water before first use.
-  To find out cooking times, please refer to the instructions in the table on next page.

MAINTENANCE:

-  Your steamer can be washed in a dishwasher.
-  When washing by hand, use hot water and washing-up liquid. Do not use abrasive pads.
-  Some foods (such as tomato) may discolour the plastic. This is normal and not a manufacturing fault.

DEFROSTING:


Place the frozen food in the steam bowl without the lid. The liquid will remain in the bottom of the pot and will not harm the food.

COOKING:

Food	Portion	Power levels	Cooking time (min.)	Standing time (min.)	Handling
Artichokes	300 g (1-2 pcs)	800 W	5-6	1-2	Bowl with insert tray + Lid
	Instructions Rinse and clean artichokes. Put insert tray into bowl. Set artichokes on tray. Add one tablespoon lemon juice. Cover with lid.				
Fresh vegetables	300 g	800 W	4-5	1-2	Bowl with insert tray + Lid
	Instructions Weigh the vegetables (e.g. broccoli, cauliflower, carrots, pepper) after washing, cleaning and cutting into similar size. Put tray into bowl. Distribute vegetables on insert tray. Add 2 tablespoons water. Cover with lid.				
Frozen vegetables	300 g	600 W	7-8	2-3	Bowl with insert tray + Lid
	Instructions Put the frozen vegetables into the steam bowl. Put insert tray into bowl. Add 1 tablespoon water. Cover with lid. Stir well after cooking and standing.				

Food	Portion	Power levels	Cooking time (min.)	Standing time (min.)	Handling
Rice	250 g	800 W	15-18	5-10	Bowl + Lid
	Instructions Put rice into the steam bowl. Add 500 ml cold water. Cover with lid. After cooking let stand white rice 5 minutes, brown rice 10 minutes.				
Jacket potatoes	500 g	800 W	7-8	2-3	Bowl + Lid
	Instructions Weigh and rinse the potatoes and put them into steam bowl. Add 3 tablespoons water. Cover with lid.				
Stew (chilled)	400 g	600 W	5-6	1-2	Bowl + Lid
	Instructions Put stew into the steam bowl. Cover with lid. Stir well before standing.				
Soup (chilled)	400 g	800 W	3-4	1-2	Bowl + Lid
	Instructions Pour into steam bowl. Cover with lid. Stir well before standing.				
Frozen soup	400 g	800 W	8-10	2-3	Bowl + Lid
	Instructions Put frozen soup into steam bowl. Cover with lid. Stir well before standing.				
Frozen yeast dumpling with jam filling	150 g	600 W	1-2	2-3	Bowl + Lid
	Instructions Moist the top of filled dumplings with cold water. Put 1-2 frozen dumplings side by side into the steam bowl. Cover with lid.				
Fruit compote	250 g	800 W	3-4	2-3	Bowl + Lid
	Instructions Weigh the fresh fruits (e.g. apples, pears, plums, apricots, mangoes or pineapple) after peeling, washing and cutting into similar sizes or cubes. Put into steam bowl. Add 1-2 tablespoons water and 1-2 tbsp. sugar. Cover with lid.				

 Handling of power steam cooker

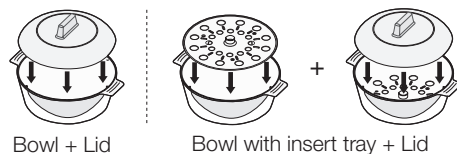

PRECAUTIONS:

- ☑ Take special care when opening the lid of your steamer, because the steam escaping may be very hot.
- ☑ Use oven gloves when handling after cooking.

cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry. The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminum foil	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.

Cookware	Microwave-Safe	Comments
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging <ul style="list-style-type: none"> Polystyrene cups containers Paper bags or newspaper Recycled paper or metal trims 	✓ ✗ ✗	Can be used to warm food. Overheating may cause the polystyrene to melt. May catch fire. May cause arcing.
Glassware <ul style="list-style-type: none"> Oven-to-tableware Fine glassware Glass jars 	✓ ✓ ✓	Can be used, unless decorated with a metal trim. Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly. Must remove the lid. Suitable for warming only.
Metal <ul style="list-style-type: none"> Dishes Freezer bag twist ties 	✗ ✗	May cause arcing or fire.
Paper <ul style="list-style-type: none"> Plates, cups, napkins and kitchen paper Recycled paper 	✓ ✗	For short cooking times and warming. Also to absorb excess moisture. May cause arcing.
Plastic		

Cookware	Microwave-Safe	Comments
<ul style="list-style-type: none"> Containers 	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
<ul style="list-style-type: none"> Cling film 	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
<ul style="list-style-type: none"> Freezer bags 	✓ X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended ✓X : Use caution X : Unsafe

troubleshooting and error code

TROUBLESHOOTING

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven
- Air flow around the door and outer casing
- Light reflection around the door and outer casing
- Steam escaping from around the door or vents

The oven does not start when you turn the Time/Weight (⌚/g) dial.

- Is the door completely closed?

The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

The food is not cooked at all

- Have you set the timer correctly and/or pressed the **Time/Weight** (⌚/g) dual.
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked


- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

The oven causes interference with radios or televisions

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

Sparkling and cracking occur inside the oven (arcing)

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

-  If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.

Please have the following information read.

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG after sales service.

technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MS23F301E**, MS23F302E**
Power source	220 V ~ 50 Hz
Power consumption Microwave	1150 W
Output power	100 W / 800 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75S(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	489 x 275 x 374 mm 330 x 211 x 324 mm
Volume	23 liter
Weight Net	12 kg approx



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk (Chinese) www.samsung.com/hk_en (English)
INDIA	1800 3000 8282 1800 266 8282	www.samsung.com/in
INDONESIA	0800-112-8888 (Toll Free) 021-5699-7777	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com